

Battery Motor Programming

PREPARATION

1. Charge the motor

All motors are tested and fully charged at the factory. Please charge the motor for 6 hours, using the recommended AC charger when needed.

2. Wake up

Put the Battery switch **ON** (located on the motor head).

3. Find the P1 & P2 Button:

- P1** is on the motor head.
- HAND** remote's **P2** is under the battery cover.
- WALL** remote's **P2** is on the back.

4. Activate the remote:

Remove the plastic under the remote battery (as sent from factory).

5. Set the channel to be used on the 15CH Remote:

- Press and hold the **+ & -** button for **5 seconds**, you will see **15**, and then
- Press **+** or **-** to select the channel you'd like to use, then
- press **Stop** to confirm.

PROGRAMMING

1. Wake up OR Reset the motor (to factory default):

- Put the Battery switch **ON** (located on the motor head).
- Press and hold the motor head **P1** button for approx. **14 seconds**, until there are **4 jogs* and 4 short beeps**.

2. Pair the Remote to the blind's motor (select the desired channel, or single remote):

- Press and hold the motor head **P1** for

2 seconds, until the motor activates 1 jog and 1 long beep.

- Press and hold the remote **STOP** button for **2 seconds** (within 10 seconds), until the motor activates 2 jogs and 3 short beeps.
 - The motor and remote are now paired.
- ### 3. Check the direction
- If it is correct, **Go to STEP 4. If not, Change the direction**
- Press the remote **Up** for **1 second**.
 - Press and hold the remote **Up & Down** for **2 seconds**.
 - After 1 jog, the motor's directions are now changed.

OR

- Press and hold the motor head **P1** for **10 seconds**.
- Until motor activates 3 jogs Release **P1**, and then there should be 3 short beeps.
- The motor's directions are now changed.

Check the direction to confirm it has changed.

4. Set the Limits.

Top limit:

- Move the blind to the desired upper limit (approximately **100mm** from the top).
- Press and hold the remote **Up & Stop** buttons for approx. **5 seconds**, until the motor activates 2 jogs and 3 short beeps.
- The top limit is now set.

Bottom limit:

- Move the blind to the desired lower limit (approximately **100mm** from the bottom).
- Press and hold the remote **Down &**

Stop buttons approx. **5 secs**, until the motor activates 2 jogs and 3 short beeps.

- The bottom limit is now set.

5. Set (or delete) the Favourite Position:

- Move the blind to the desired position.
- Press remote **P2** for **1 second**, the motor activates 1 jog and 1 short beep.
- Press remote **STOP** for **1 Second**, the motor activates 1 jog and 1 short beep.
- Press remote **STOP** for **1 Second**, until the motor activates 2 jogs and 3 short beeps, the favourite position is set.
 - Press remote **STOP** for **3 Seconds**, the blind will move to the favourite position.
 - Repeat steps **2, 3 and 4** above and the motor will activate 1 jog and 1 short beep to delete the favourite position.

6. Pair New Channels, Remotes or Create A Group Channel (one motor can store a maximum of 20 channels):

- Press **P2 on EXISTING** remote for 1 second, and the motor will activate 1 jog and 1 short beep.
- Press **P2 on EXISTING** remote for 1 second again and the motor will activate 1 jog and 1 short beep again.
- Press **STOP (OR P2)** for 2 seconds on a **NEW** channel, GROUP channel, or NEW remote.
- Motor will activate 2 jogs and 3 short beeps.
- Limits are now copied.

OPERATING ALL THE BLINDS AT ONCE

- On the **15 channel remote**, select channel **"00"**.

MODIFYING THE SETTINGS

Adjusting the limits once set:

Adjusting the top limit:

- Move the blind to the top limit.
- Press and hold the remote **Up & Stop** buttons approx. **5 seconds**, until the motor activates 1 jog and 1 long beep.
- Adjust the limit.
- Press and hold the remote **Up & Stop** buttons approx. **5 seconds**, until the motor activates 2 jogs and 3 short beeps.
- The setting is confirmed.

Adjusting Bottom limit:

- Move the blind to the bottom limit.
- Press and hold the remote **Down & Stop** buttons approx. **5 seconds**, until the motor activates 1 jog and 1 long beep.
- Adjust the limit.
- Press and hold the remote **Down & Stop** buttons approx. **5 seconds**, until the motor activates 2 jogs and 3 short beeps.
- The setting is confirmed.

TO LOCK OR UNLOCK THE COMBINATION FUNCTION FOR REMOTE

- Press and Hold the STOP button over 20 seconds, until the letter **"L"** or **"U"** is displayed on the screen.

- A **jog** is when the blind moves in a small **up and down movement**.
- Battery Motor Only works with the NEW Model Remote (Factory default is bidirectional **Mode 2**).