

Measurement Form

Helpline: 0800 eBlinds (0800 325 463 or 0274 325 463)

To make your online ordering easier, use this form to enter the specifications for each individual blind required. See the guide below for an explanation of each field.


Blind No.	Blind Location	Blind Width	Blind Drop	Fabric Type	Blind Fit	Roll Direction	Bottom Bar Type & Colour	Bracket Type & Colour	Blind Control	Control / Charge Side	Special Instructions
	Room name	(mm)	(mm)	SC/LF/PB/TB	Inside/Outside	Back / Front	Oval, Linear, Round	Single/Duo	Chain Colour / Motor	Left / Right	
1											
2											
3											
4											
5											
6											
7											
8											

Blind Location: the blind will be labelled with this room name.


Blind Width & Drop: window width and window height (drop). Refer to our measuring manual to achieve accurate measurement.

Fabric Type: Sunscreen, Light Filter, Plain Blockout, or Textured/Thermal Blockout.


Blind Fit: is the blind fitted inside or outside of the window frame?

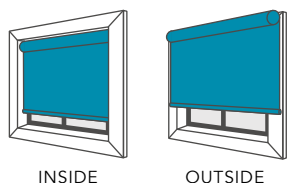


Roll Direction: Back roll – the fabric rolls off the back of the blind. Front roll – the fabric rolls off the front of the blind. Consider front roll if handles or mullions are in the way of the fabric dropping down. Choosing back roll will mean the reverse side of the fabric will show at the top of the blind.

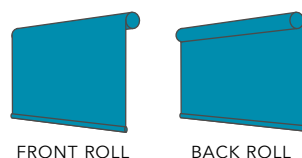

Bottom Bar Type: Oval, Linear, or Round.
Bottom Bar Colour: white, sandstone, anodised or black.

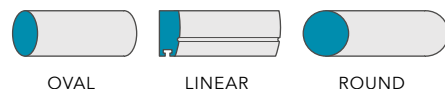


Bracket Type: Single or Duo bracket. The single bracket is used when the window is fitted with one blind (Sunscreen, Light Filter or Blockout). The Duo bracket is used for integrating two blinds (sunscreen and blockout) at one window. **Bracket Colour:** white, sandstone, grey or black.

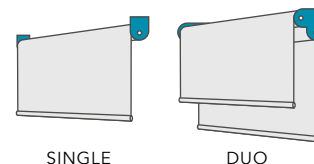

Blind Control: Operation by either chain or motor. **Chain:** a chain's default length is 2/3 of the blind drop unless advised. If different, please specify in the special instructions field. **OR Rechargeable Motor:** you will need to add a motor charger cable

to your order. You will also need to choose your remote – either a hand-held remote or a wall-mounted remote. **OR** if you'd like control from your smartphone, select the Smartphone App Hub.

Control/Charge Side: this is the side you'd like your blind chain control on, or the side of the nearest power point/usb outlet to plug in your charging cord.

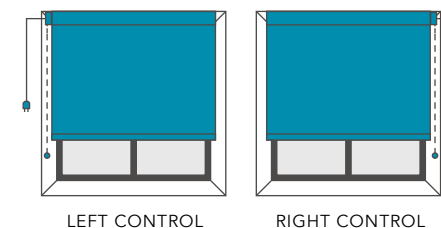

Measuring Width & Drop Manual

How to measure correctly


- Use a good quality tape measure to ensure your measuring is accurate. Poor quality brands will give you inaccurate measurements.
- Take all measurements to the nearest millimetre – do not round off your measurements.
- Take all measurements twice ensuring that you get the same result each time.

Inside Fit

The blind is installed inside the window frame. This measurement must be very accurate to make sure the blind will fit in the space.

INSIDE WIDTH (Horizontal measurement): Measure from the top left hand inside edge of the window frame to the right hand side where the blind will be installed. Then repeat halfway down the window and also at the window sill.

INSIDE DROP (Vertical measurement): Measure the exact window height from the inside top of the frame to the window sill.

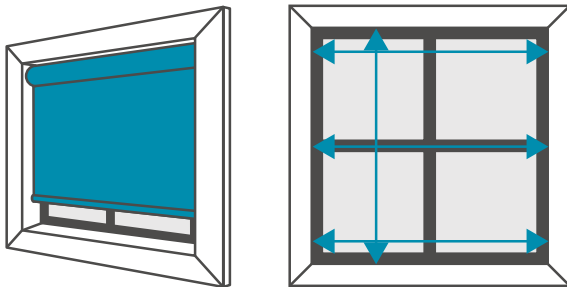


Outside Fit ON Frame

The blind is installed on window frame, but outside of the recess.

OUTSIDE WIDTH on frame – Start with the horizontal measurement and measure from the left edge of the frame to the right edge (so it includes the frame)

OUTSIDE DROP on frame – Start your measure from the top of the window frame edge, then make your drop down to the point you want your blind to finish (below your window sill or at your window sill).

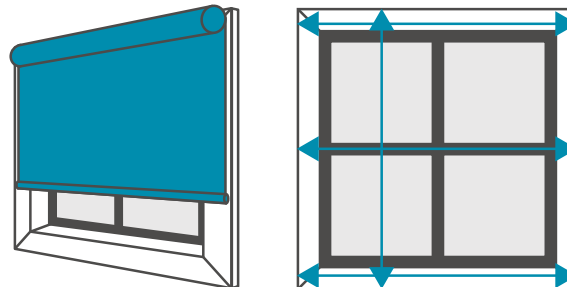

Outside Fit PAST Frame

The blind is installed PAST the window frame (above the window frame)

OUTSIDE WIDTH PAST Frame – Start with the horizontal measurement and measure from the top left point where you want your blind to start, to the top right point where it will finish. OR add 50mm past the frame on each side as indicated in the diagram below.

OUTSIDE DROP PAST Frame – Start your measurement 50mm above the window frame, then make your drop down to the point you want your blind to finish (below your window sill or at your window sill).

